



Fact Sheet

Kitchen unit doors dropped / not closing properly / Draw Fronts

Tools

- Screwdriver (Flat head and Phillips)

Steps

1. Make sure that the 2 screws that hold the hinge to the unit are tight
2. Adjust screw (grub) in the middle of the hinge to move the unit door forward and backwards
3. Close the unit door to see if this has now lined up if not please repeat steps above until this has been rectified

4. If you have a loose draw front to the kitchen you can check the following;
 - Tighten the screws located behind the handle
 - Tighten the screws (usually four) located inside the draw at the back of the draw front in each corner

We hope this information was helpful. If you are still experiencing problems with your unit doors, then please contact your repairs service.

You can also find a video to accompany this fact sheet at: www.mearsgroup.co.uk

These videos and accompanying guidance notes are intended as a guide only and it is your responsibility to ensure you do not put your safety or the safety of others at risk. If you are in any doubt as to whether you can carry out a task safely then you should contact a professional for assistance. Mears Group Plc and its subsidiaries will not be liable for any injury, loss or damage caused, of any nature, as a result of the use of these guides.